


HIP | HOWARD INDUSTRIES POLYFRAME SYSTEM

KEYHOLE - HARD WALL MOUNT

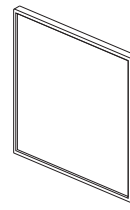

1

Using provided suction cup, gently remove sign face from the frame.

2

Use a level to place the sign to its intended location and mark the keyhole slot locations. Refer to ADA requirements if applicable.

3

Using the marks from step 2, install appropriate screws and anchors.

4

NOTICE:



Ensure to leave the screw heads extended about 1/4". This will allow the sign to slide down and into place.

5


Align the slots of the sign over the extended screws. Slide down into place and tighten screws.

6

Align the sign face with the frame and push the Pop Locks back into place.

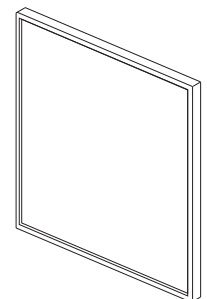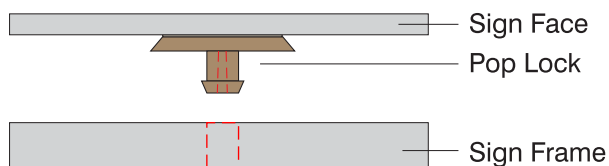

For more product information, installation tips, and quality signage merchandise, go to

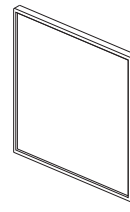

NEW PANEL INSTALLATION

1

In the existing frame, place the appropriate number of Pop Locks. (Typical quantity is 4).

Peel away the liners to reveal the adhesive.

2

Align the sign panel to the frame and gently push to adhere.

3

Sign Face
Pop Lock
Sign Frame

For more product information, installation tips, and quality signage merchandise, go to