


# ACRYLIC PATIENT FOCUSED KEYHOLE INSTALLATION INSTRUCTIONS



**1 MOUNTING TEMPLATE**

Using a level, align the provided installation template to the intended location. If applicable, refer to ADA installation requirements.

**2**

STANDARD TABS 4 1/2" 4 1/2"  
MINI TABS 3" 3"

Ensure that there is clearance on either side of template to allow tabs to slide unobstructed. (4-1/2" for Standard Tabs, 3" for Mini Tabs).

**3**

Use a writing utensil to mark the TOP EDGE of each slot.

**4**

WALL

Using the marks from step 3, install appropriate hardware (screw anchors may be required). **You must use flat head (countersunk) screws, no larger than #6.**

**5**

**CAUTION:**


0.22"

Ensure that the screw head extends from the wall (0.22") to allow the sign to slide firmly into place.

**6**

WALL

Affix sign to wall by aligning keyholes over screws and sliding down into place.

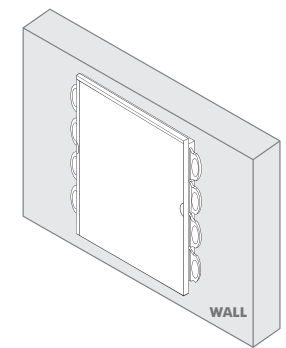

For more product information, installation tips, and quality signage merchandise, go to